



Installing a Carver Powersport Cover



All Carver ATV/UTV, Snowmobile, and Motorcycle Covers are all rolled and packaged with the front end of the cover to the outside. The tag on the front end is sewn to the inside of the cover for easy identification.

BEFORE INSTALLING COVER - Please be sure that your unit is clean. Soiled covers cannot be exchanged or refunded.

Your Carver Cover will provide years of service if you take the precaution of examining your unit for sharp areas that could tear the cover. Taking a few moments to pad these areas before installing the cover will help extend the life of the cover. To install the cover, proceed as follows:

- Place the rolled cover on the front end of the unit.
- Roll the cover to the back end of the unit and adjust the sides of the cover downward so that it is even on each side.

For ATV and UTV Covers:

- Heavy-duty shock cord is encased in the hem
- Secure the elasticized hem underneath the body of the unit and secure the cover with the heavy-duty tie-down straps provided (see reverse for tie-down instructions).
- Suitable for light/local travel with tie-down straps properly installed.

For Snowmobile Covers:

- Two sections of heavy-duty webbing are encased in the hem, one section around the body of the unit, and one section in the nose of the unit.
- A dual quick-release buckle is installed on the webbing in each of the four locations where the webbing exits the cover near the shocks.
- Connect the quick-release buckles inside the shock absorber mounts and adjust each side of the webbing for a snug fit.
- Secure the cover further using the heavy-duty tie-down straps provided (see reverse for tie-down instructions).
- Tie-down straps must be properly installed for travel.

For Motorcycle Covers:

- Take the attached belly strap and secure it underneath the middle of the unit near the kick stand.
- For storage only.

PLEASE NOTE - Please make sure that the unit is completely cool to the touch before putting the cover on. Contact with hot surfaces will damage the cover.

Cleaning Instructions: To keep your cover looking its best, regularly brush off any loose dirt with a soft brush and rinse with lukewarm water. To clean, a solution of lukewarm water and mild natural soap such as Ivory™ may be used. Rinse thoroughly and allow to air dry. The use of detergent is not recommended as it may diminish the water repellent finish on certain fabrics and invite the growth of mildew. We also recommend the use of 303 Fabric & Vinyl Cleaner to safely remove dirt and difficult stains. Allow to dry thoroughly before folding for storage.

Continued on Reverse



Tie-Down Instructions for ATV/UTV and Snowmobile Covers

All Carver ATV, UTV, and Snowmobile Covers come standard with 8-foot heavy-duty tie-down straps to be used with the tie-down loops in the hem of the cover. **Does not apply to motorcycle covers*

To secure your cover for storage or trailering, proceed as follows:

Step 1

Thread the buckle-end of the tie-down strap through a tie-down loop from back to front. Pull through approximately 12" and tie-off with a simple overhand knot so that the strap is secure. Guide the plain end of the strap underneath the unit to the opposite side.

Step 2

Thread the plain end of the strap through the tie-down loop on the opposite side and guide the strap underneath the unit back to the original side.

Step 3

Thread the strap through the top slot in the quick release buckle from back to front, pulling the end of the strap toward you.

Step 4

Continue threading the strap over the center bar of the buckle and into the bottom slot of the buckle (see illustration). The strap is now fully adjustable by pulling down on the loose end of the webbing. Install all the straps on the cover before tightening.


Step 5

Be sure the cover is centered on the unit, then tighten all straps securely so that the cover is taut.

Step 6

Trim the straps if necessary. Leave approximately 12" of webbing for adjustability and trim off any excess using a pair of scissors. Lightly singe the cut edge of the webbing using a cigarette lighter to fuse the yarns and prevent the webbing from unraveling. **DO NOT SET ON FIRE AND BE SURE TO EXTINGUISH ANY FLAMES.**

To remove the cover, simply disconnect the quick release buckles by squeezing the sides. For quick and easy re-installation of the cover, leave the straps attached to the tie-down loops. After first use, check straps for tautness. If they require adjustment, untie knot and refer to step 1.

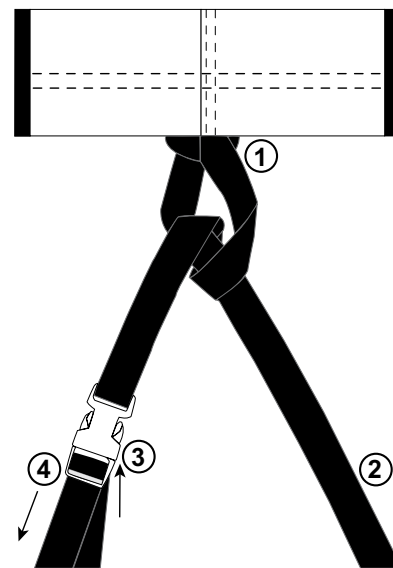

Carver by Covercraft Industries, LLC. produces quality RV Covers, Boat Covers, Personal Watercraft Covers and Bimini Tops. We take great pride in the craftsmanship and attention to detail that goes into our products.



Carver by Covercraft Industries, LLC

212 N. Lyles Ave., Landrum, SC 29356

More Information at CarverCovers.com
or call (888) 48-COVER.

The Best Covers Under the Sun™